
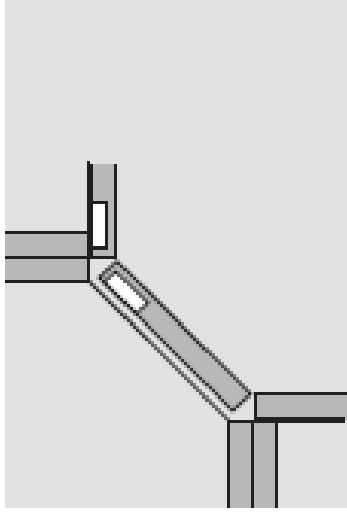
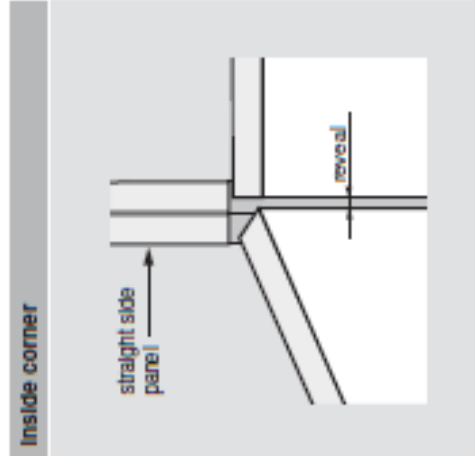



BLUM 45 degree Clip Top Blumotion Hinge Full Overlay

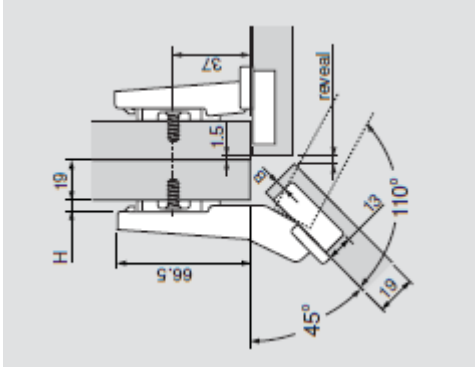

Thickness greater than 19, trial app. recommended




1. Drill 35mm hole in door at required height and hinge cup centre point.
2. Screw on or insert hinge.
3. Mark centre height of hinge arm on side frame.
4. Position mounting plate 37mm from edge of side frame.

Hinge cup centerpoint

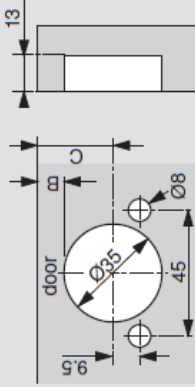


C = Cup centerpoint


20.5	21.5	22.5	23.5	24.5	25.5
13/16"	27/32"	7/8"	15/16"	31/32"	1"
3	4	5	6	7	8
B = Bore distance					

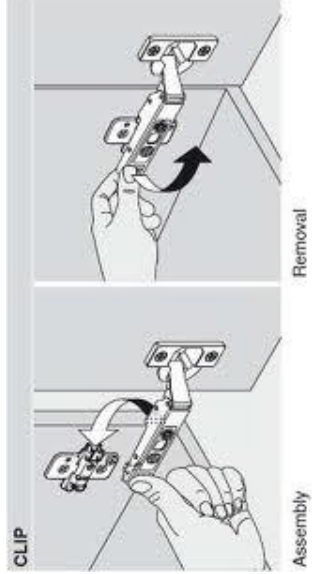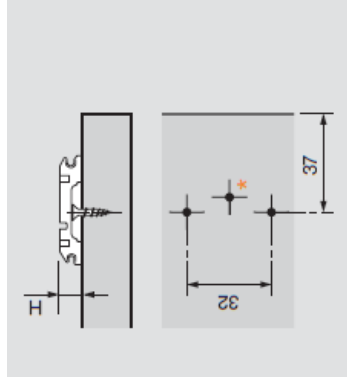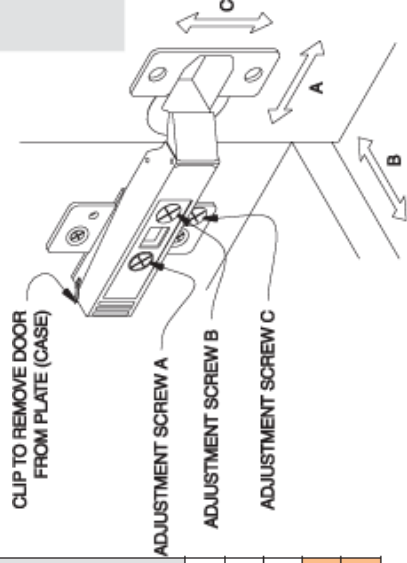


Screw-on
Use #6 wood screws

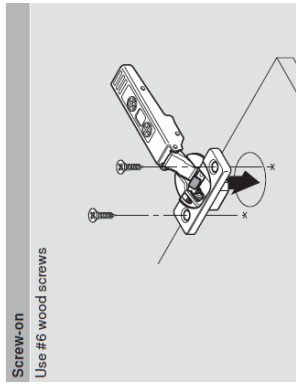

INSERTA
Tool-free attachment with INSERTA expanding Ø8 mm dowels

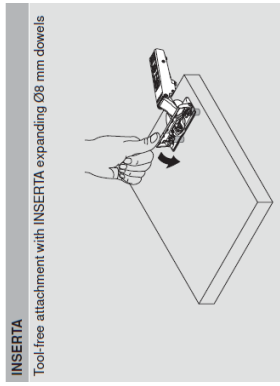

Number of Hinges

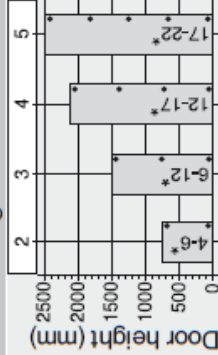

The number of hinges depends on the front weight.

To achieve good stability, distances between hinges should be as large as possible.

Indications on weight and height apply to a standard door width of 600 mm.